
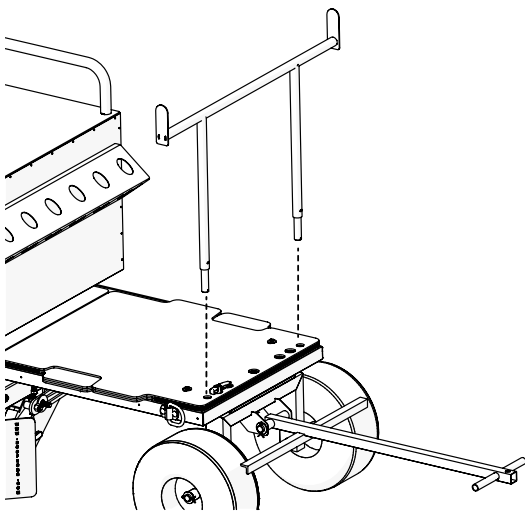
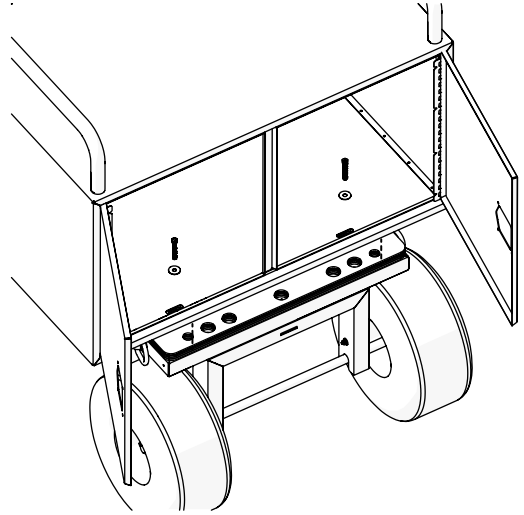


Optional Equipment

Material Tool Box Installation

NOTE: The Penetrator cart only needs 8 concrete ballast plates when the material box is installed. If you're installing the materials box on a Penetrator cart with 10 plates, two ballast plates should be removed.

1. Remove the 2 hex head bolts & washers used to secure the rear concrete ballast plates.
2. Two people are needed to lift the materials box safely on top of the Penetrator cart. Place the materials box on the back half of the cart aligning the two mounting holes over the concrete ballast mounting holes. Open the locking doors and the mounting holes are located just inside the door edge. Look through the holes and make sure you can see completely through the materials box, all 4 concrete plates and the cart frame. Use a screw driver or a center punch to align box/plates/frame.
3. Place the washer over the hex head nut and insert the bolt through the material box, 4 concrete plates and frame. If the plates are aligned properly the hex head bolt will pass through to the "L" shaped bracket. Once both bolts are aligned and fastened with the underside nut, tighten both bolts.

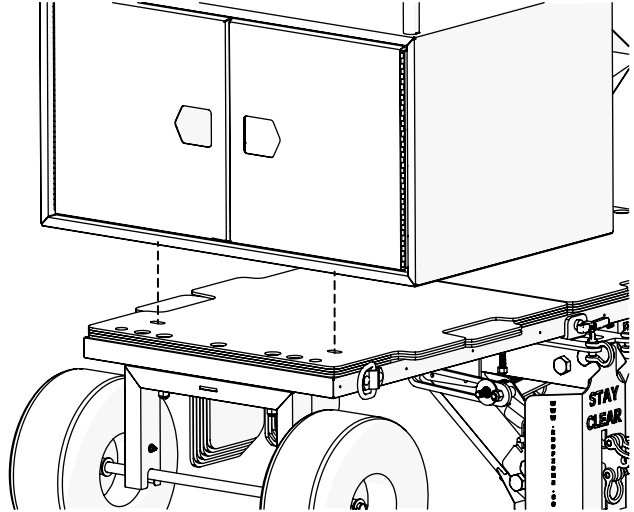

Rolled Goods Rack

1. Align the rolled goods rack with the mounting holes located above the front axle. Insert the rolled goods post into the corresponding holes.
2. Secure the rolled goods rack by inserting the safety pin into the post hole underneath the cart frame.

