



Safe Keeper

## USER INSTRUCTION MANUAL

Applicable to Suspension Intolerance Strap : STS 01-SK  
Manufacturer : SAFE KEEPER, 314 E. CANAL ST. MULBERRY, FL 33860



### Care by SAFE KEEPER even after a Fall !

Avoid the effects of Suspension Trauma with the use of SAFE KEEPER Suspension Intolerance Strap.

- ✓ Extremely effective, specially designed to help relieve the negative effects of Suspension Trauma.
- ✓ Compact and Light-weight. Does not hamper the activity of worker while at work.
- ✓ Allow the suspended worker to stand up in his harness to relieve pressure.
- ✓ Easy to attach to the Harness with the help of the textile loop and velcro provided.
- ✓ Easy deployment, operation is fool-proof.

### INSPECTION :


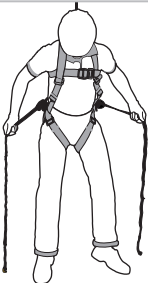




Regular Inspection is recommended prior to using this with harness. It can be used on numerous occasions if it has been inspected prior to use and shows no sign of damage.

### LIFE SPAN :

Maximum Life Span for the Suspension Intolerance Strap is 10 years.

**CAPACITY / USER WEIGHT :** SWL or Max user weight - 140kg. (310 lbs.)

### STEPS TO USE

 <p>Un-zip the pouches fitted on both sides of Harness</p> <p><b>1</b></p>	 <p>Hold the 2 straps together</p> <p><b>2</b></p>	 <p>Connect the straps with each other making a loop with the help of easy-to-use buckle</p> <p><b>3</b></p>
 <p>Put your feet into the loop</p> <p><b>4</b></p>	 <p>Stand onto the loop, so that the thigh strap are free to move</p> <p><b>5</b></p>	 <p>Adjust the sit strap towards the front to release pressure and give a seat-posture</p> <p><b>6</b></p>

**MARKING ON PRODUCT:**

The suspension intolerance strap is marked with :

- ✓ Identification of the manufacturer
- ✓ Type or product code
- ✓ Month and Year of Manufacture
- ✓ Batch/Lot No
- ✓ Serial No. of Lanyard
- ✓ Material

**MARKING**



**HOW TO DISPOSE A SUSPENSION INTOLERANCE STRAP:**

When the suspension intolerance strap becomes unfit or in case of any wear and tear, dispose it immediately.

**Follow the following steps for disposal:**

- ✓ Make the three plastic crates namely- Textile, Metal & Plastic for placing the respective components of the suspension intolerance strap.
- ✓ Spread the suspension intolerance strap on a table / flat surface.
- ✓ Inspect the wear & tear present on the suspension intolerance strap.
- ✓ If any wear and tear is observed, dispose the suspension intolerance strap using a sharp scissors; first cut the Textile and dismantle the suspension intolerance strap.
- ✓ Put the Textile, Plastic & Metal components in their respective plastic crates.

**DISCLAIMER:**

This information on the product is based upon technical data that SAFE KEEPER obtained under laboratory conditions and believes to be reliable. SAFE KEEPER does not guarantee results and take no liability or obligation in connection with this information. As conditions of end use are beyond our control it is the user's responsibility to determine the hazard levels and the use of proper personal protective equipment. Persons having technical expertise should undertake evaluation under their own specific end-use conditions, at their own discretion and risk. Please ensure that this information is only used to check that the product selected is suitable for the intended use. Any product that is damaged, torn worn or punctured should be discontinued from usage immediately.

EQUIPMENT RECORD				
Product :				
Model & type/Identification		Trade Name		Identification number
Manufacturer		Address		Tel, fax, email into use
Year of manufacture		Purchase Date		Date first put into use
Other relevant information (e.g. document number)				
PERIODIC EXAMINATION AND REPAIR HISTORY				
Date	Reason for entry (periodic examination or repair)	Defects noted, repairs carried out and other relevant information	Name and signature of competent person	Periodic examination next due date

STS-181218-V5